

ATV



Team Tips

ARTICLE: A-15-01-01

DATE: January 21, 2015

Published for Polaris Dealerships, Distributors, and Service Technicians

SUBJECT: Service Manual Correction to Periodic Maintenance Chart

MODELS: All 2014 Sportsman 570 Models and All 2015 Sportsman EXT / 570 Models

Polaris has identified an error in Chapter 2 of the 2015 SPORTSMAN ETX 2014-2015 SPORTSMAN 570 / UTE Service Manual (9925712). **The Periodic Maintenance Interval chart did not print.**

Please print pages 2-4 of this communication and permanently fasten them within any printed copy of the 2015 SPORTSMAN ETX 2014-2015 SPORTSMAN 570 / UTE Service Manual (9925712) in your possession.

AFFECTED MANUALS:

Service Manual Part Number	Service Manual Description	Page
9925712	2015 SPORTSMAN ETX 2014-2015 SPORTSMAN 570 / UTE	2.14

NOTE: The electronic Service Manual content was updated upon the release of this Team Tip.

MAINTENANCE

Periodic Maintenance Chart Key

SYMBOL	DESCRIPTION
▶	Perform these operations more often for vehicles subjected to severe use.
E	Emission-related Control System Service (California) Failure to conduct this maintenance will not void the emissions warranty but may affect emissions
D	Have an authorized POLARIS dealer perform these services.

SEVERE USE ITEM: Severe Use is defined as frequent vehicle immersion in mud, water or sand, racing or race-style high rpm use, prolonged low speed - heavy load operation or extended idle. More preventative maintenance is required under these conditions. Fluid changes, cable and chassis lubrication are required more frequently. For engine oil, short trip cold weather riding also constitutes severe use. Pay special attention to oil level. A rising oil level in cold weather can indicate contaminants collecting in the oil sump or crankcase. Change oil immediately and monitor level. If oil level begins to rise, discontinue use and determine cause.

NOTE: Inspection may reveal the need for replacement parts. Always use genuine Polaris parts.



WARNING

Improperly performing the procedures marked with a ■ could result in component failure and lead to serious injury or death. Have an authorized Polaris dealer perform these services.

Periodic Maintenance Chart

Periodic Maintenance Chart

ITEM	MAINTENANCE INTERVAL (WHICHEVER COMES FIRST)			REMARKS
	HOUR-S	CALENDAR	MILES (KM)	
Steering	-	Pre-Ride	-	Make adjustments as needed.
Front-suspension	-	Pre-Ride	-	
Rear-suspension	-	Pre-Ride	-	
Tires	-	Pre-Ride	-	
Brake fluid level	-	Pre-Ride	-	
Brake lever / pedal travel	-	Pre-Ride	-	
Brake systems	-	Pre-Ride	-	
Wheels /fasteners	-	Pre-Ride	-	
Frame fasteners	-	Pre-Ride	-	
Engine Oil Level	-	Pre-Ride	-	
Winch (if equipped)	-	Pre-Ride	-	
▶ E Air filter, pre-filter	-	Pre-Ride	-	Inspect; clean often
▶ Air box sediment tube	-	Daily	-	Drain deposits when visible
Coolant	-	Daily	-	Check level daily, change coolant every 2 years
Power Steering unit (if equipped)	-	Daily	-	Inspect daily; clean often
Head lamp / tail lamp / worklight	-	Daily	-	Check operation; apply dielectric grease if replacing

ITEM	MAINTENANCE INTERVAL (WHICHEVER COMES FIRST)			REMARKS	
	HOUR-S	CALENDAR	MILES (KM)		
▶ E	Air filter, main element	-	Weekly	-	Inspect; replace as needed
	Recoil housing	-	Weekly	-	Drain water as needed, check often if operating in wet conditions
▶ D	Brake pad wear	10 H	Monthly	100 (160)	Inspect periodically
	Battery	20 H	Monthly	200 (320)	Check terminals; clean; test
▶ E	Engine breather filter (if equipped)	25 H	Monthly	250 (400)	Inspect; replace if necessary
	Fuel System	25 H	Monthly	—	Inspect; Cycle the Key to pressurize the fuel pump; check lines and fittings for leaks and abrasion.
▶ E	Engine oil change (break-in)	25 H	Monthly	250 (400)	Perform a break-in oil and filter change
▶	Demand drive fluid	25 H	Monthly	250 (400)	Initial fluid level inspection; Change yearly*
▶	Rear gearcase oil	25 H	Monthly	250 (400)	Initial fluid level inspection; Change yearly
▶	Transmission fluid	25 H	Monthly	250 (400)	Initial fluid level inspection; Change yearly
▶	General lubrication	50 H	3 M	500 (800)	Lubricate all grease fittings, pivots, cables, etc.
D E	Throttle Cable/ TRS Switch	50 H	6 M	500 (800)	Inspect; adjust; lubricate; replace if necessary
E	Air intake ducts/ flange	50 H	6 M	300 (500)	Inspect ducts for proper sealing/air leaks
	Drive belt	50 H	6 M	500 (800)	Inspect; adjust; replace as needed
▶	Cooling system	50 H	6 M	1000 (1600)	Inspect coolant strength seasonally; pressure test system yearly
▶	Engine oil change	100 H	6 M	1000 (1600)	Change the oil and filter
▶	Oil lines and fasteners	100 H	6 M	1000 (1600)	Inspect for leaks and loose
▶	Demand drive fluid (normal use)	100 H	12 M	1000 (1600)	Change fluid
▶	Rear gearcase oil	100 H	12 M	1000 (1600)	Change fluid
▶	Transmission oil	100 H	12 M	1000 (1600)	Change fluid
▶	Valve Clearance	100 H	12 M	1000 (1600)	Inspect; Adjust
D E	Fuel System	100 H	12 M	1000 (1600)	Cycle the key to prime and pressurize the fuel system. Check for leaks at fuel cap, fuel line / rail, and fuel pump; Replace lines every 2 years
D E	Fuel Filter	100 H	12 M	1000 (1600)	Replace yearly
▶	Radiator (if applicable)	100 H	12 M	1000 (1600)	Inspect; clean external
▶	Cooling hoses	100 H	12 M	1000 (1600)	Inspect; clean external surfaces

MAINTENANCE

	(if applicable)				
▶	Engine mounts	100 H	12 M	1000 (1600)	Inspect
	Exhaust muffler / pipe	100 H	12 M	1000 (1600)	Inspect
D E	Spark plug	100 H	12 M	1000 (1600)	inspect; replace as needed
▶	Wiring	100 H	12 M	1000 (1600)	Inspect for wear, routing, security; apply dielectric grease to connectors subjected to water, mud, etc.
D	Clutches (drive and driven)	100 H	12 M	1000 (1600)	Inspect; clean; replace worn parts
D	Front wheel bearings	100 H	12 M	1000 (1600)	Inspect; replace as needed
D	Brake fluid	200 H	24 M	2000 (3200)	Change every two years
	Spark arrestor	300 H	36 M	3000 (4800)	Clean out
D E	Valve clearance	500 H	12 M	5000 (8000)	Inspect; adjust as needed
▶	Coolant	-	60 M	-	Replace Coolant
	Idle speed	-			Adjust as needed
D	Toe adjustment	-			Inspect periodically; adjust when parts are replaced
	Headlight aim	-			Adjust as needed

▶ = Perform these procedures more often for vehicles subjected to severe use.

E= Emission Control System Service (California)

D = Have an authorized POLARIS dealer perform these services.

***Service Note:** Under extreme use, change demand drive fluid every 25 hours. *"Extreme Use" is defined as constant ADC operation on hilly or mountainous terrain, or if ADC is the primary mode of AWD operation.*