

# RZR – Cold Air Block Off/Mud Guard

KIT PN: 99161232



## Application: Polaris Ranger RZR

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain the installation instructions for future reference and parts ordering information.


**Installation Time:** Approximately 20 Minutes

### Kit Components:

QTY.	Part Description
1	Driver Side Mud Guard
1	Passenger Side Mud Guard
2	Fender Well Mud Guard
1	20 ½” Bulb Trim
1	23” Bulb Trim
8	Plastic Push Darts
2	Bulb trim strip

### Installation Supplies:

- #25 Torx Driver
- Power Drill
- ¼” Drill Bit

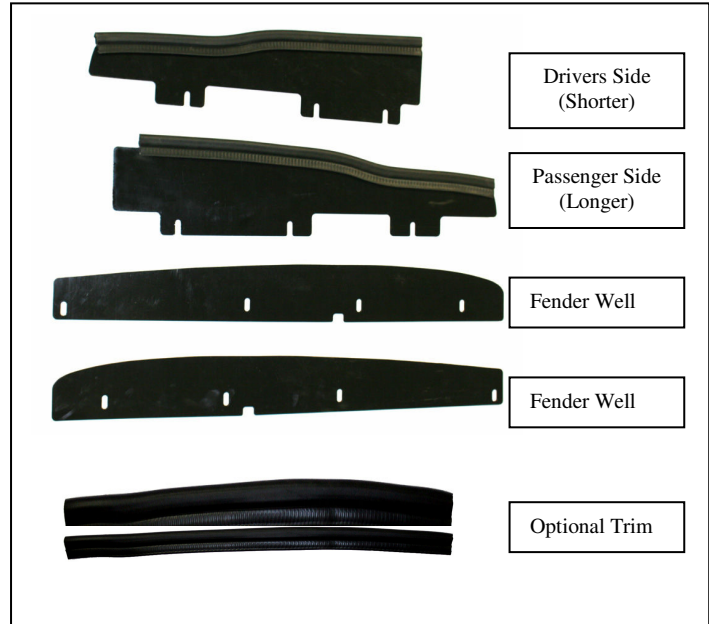


**IMPORTANT:** Your Polaris accessory kit is exclusively designed for your Polaris vehicle. Please read the installation instructions and operator’s manual thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

Screws are accessible from inside the vehicle. (Keep fasteners for step #3)

### Install Floor pan block-off

1. Install bulb trim onto each respective Drivers side and Passenger side Mud Guard. The 23” bulb trim is to be installed on the Passenger side Mud Guard. The 20.5” bulb trim is to be installed on the Drivers side Mud Guard.
2. (Refer to Figure #1) Remove existing 3-Torx screws on the drivers side and the 3-Torx screws on the passengers side that hold forward floor pan into place.

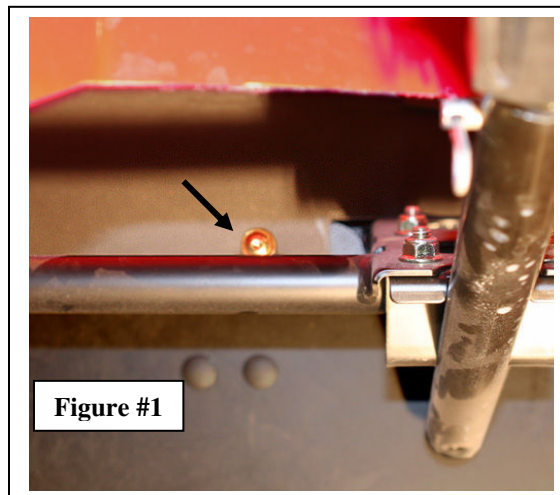

3. Place panels into place and fasten with the previously removed screws.

### Install Fender well block off:

1. (Refer to Figure #2) Place parts inside fender well to use as a drilling template.
2. Mark the holes accordingly, in the 4 slots on the guard, and use a 1/4" drill to drill 4 holes in frame. (Maintain shallow drill bit penetration)
3. On RZR vehicles with injection molded inner floor you will need to use the press on optional trim strips to seal to the vehicles side fender. If no gap is apparent the seal strips are not needed.
4. Fasten panel with supplied push darts.

